



UMODPC



The Transportation
Coordinator-Automated
Command and Control
Information System
(TC-ACCIS)

612-301-03




TC-ACCIS



- TC-ACCIS is an information management and data communication system used by the U.S. Army (Reserve and Active) to:
 - Plan and execute unit deployments
 - Create & maintain UMD, plan rail movements, prepare convoy requests, vehicle load plans MSLs & other movement documentation
- Principal users are UMOs & UMC/ITO



Distribution & Functional Diagram

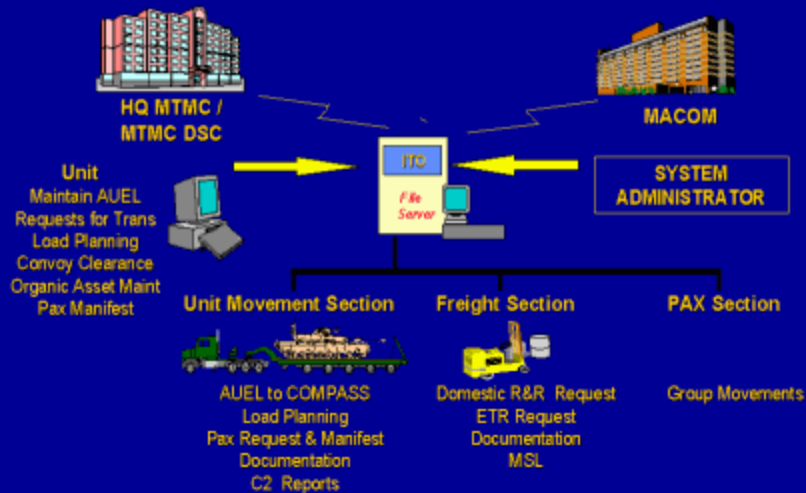



TC-ACCIS Information Flow



UMC / ITO


MACOM




TC-ACCIS

COMPASS

JOPES

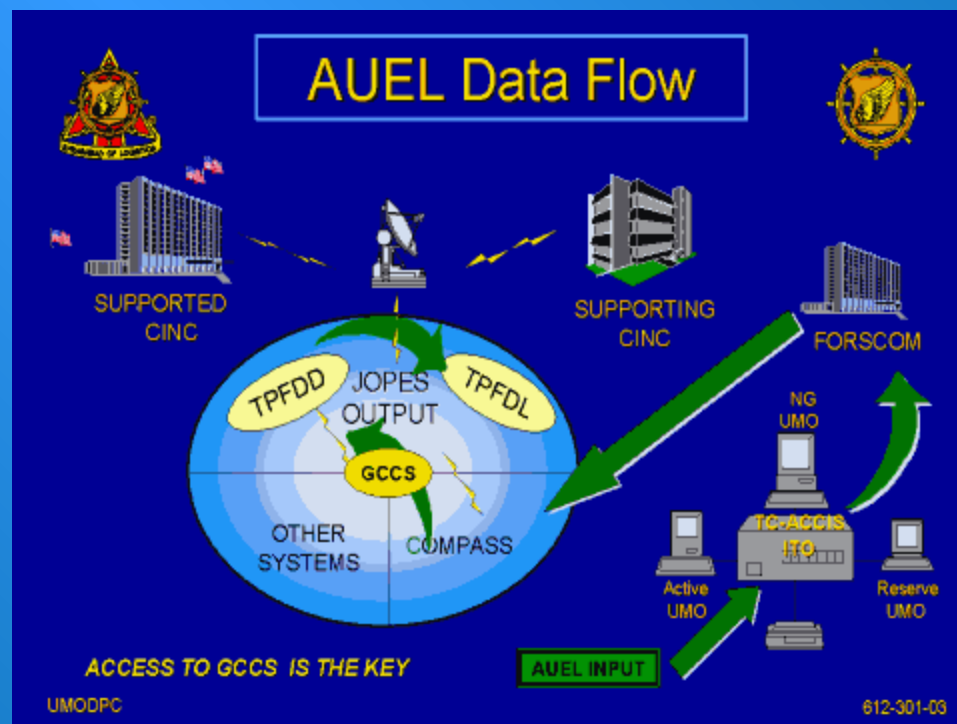

DEL Data Flow

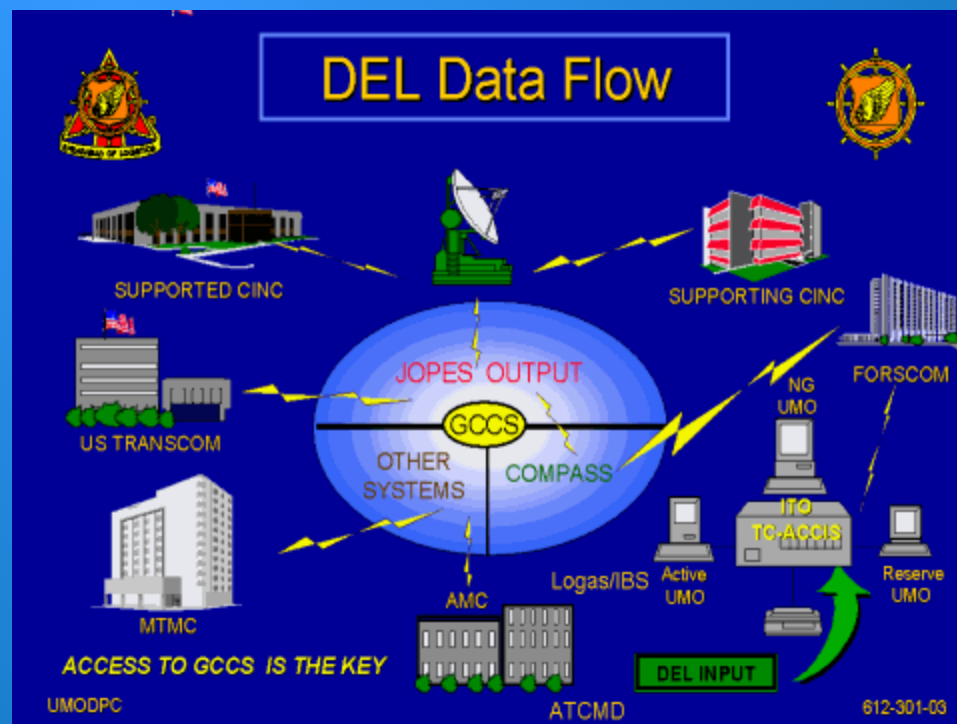



TC-ACCIS Familiarization



- This lesson is only a brief familiarization to TC-ACCIS functions.
- It is not and should not be considered a TC-ACCIS certification course.
- You or someone in your command should attend formal TC-ACCIS training.



Keyboard



- Standard PC Keyboard





Specialized Key Functions



Enter / Return Key



Specialized Key Functions (Cont)



[F6] Help keys

[F7] Text Help key



Control (Ctrl) Key

Arrow keys



Specialized Key Functions (Cont)



Ctrl-H move left one character

Ctrl-K move up one row



Ctrl-J move down one row

Ctrl-L move right one character



Specialized Key Functions (Cont)



AUEL mode

[F1] insert a row



[F2] delete a row



Specialized Key Functions (Cont)



[F3] key next page [F4] key previous page



F-7, F-8, F-9, & F10 - Special use keys - Use as directed in the instruction line



UMO Basic TC-ACCIS Tasks



- UMOs should be able to accomplish the following TC-ACCIS tasks:
 - Sign on to the system
 - Locate the Automated Unit Equipment List Data (AUEL)
 - Update and maintain the AUEL
 - Create the Deployment Equipment List (DEL)





UMO Basic TC-ACCIS Tasks (Cont)



- UMOs should be able to: (Cont)
 - Create documentation for Highway Movements
 - Submit a Request for Transportation
 - Create a Unit Rail Load List
 - Produce TC-ACCIS reports



Using The TC-ACCIS System



Logging On



- Logging onto the System is based on local procedures
- Different locations may have different requirements
- You will need a password obtained from the local system administrator or other designated authority

DD/MM/YY

TC-ACCIS Main Menu

FICIF001

- 1- Equipment List Processing
- 2-ITO Equipment List Processing
- 3-Shipping Planning
- 4-Transportation Requests
- 5-Highway Movement Planning
- 6-Load Planning
- 7-Transportation Documentation
- 8-Passenger Manifest
- 9-Electronic Mail
- A-User Utilities
- E-System Logoff

Enter Selection:

1



TC ACCIS Version: 5.0.112

DD/MM/YY

Equipment List Processing

FICEUF078

- 1 - Equipment List Administration
- 2 - Equipment List Data
- 3 - View Equipment List
- 4 - Equipment List Reports
- 5 -What if Analysis
- 6 - Archive Directory
- E - Exit to TC ACCIS Main Menu

Enter Selection:

2





Maintain AUEL (Cont)



- Enter Type Data Code:
 - D - Active Components
 - S - Reserve Components

DD/MM/YY

Equipment List Processing

FICEUF078

Press [ESC] to Accept, [CTRL-C] to Abort

DD/MM/YY

Select Type Data Code

FICEUF074

Type Data Code:

Enter the TDC or Press [F6] for Help

Enter Selection: 2



Maintain Ring Menu



- Select appropriate option from the Maintain Ring Menu:

1-Header

5-Ammo/Hazardous

2-Vehicles

6-Exit

3-SpecHdling

4-Actual Weight

MAINTAIN:

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

Maintain Equipment List

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

DD/MM/YY

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

Equipment List Data

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

FICEUFO12

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

UIC

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

list sorted by

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

Exercise

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

LIN/Index

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

EchULN

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

D M S A/H

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

*

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

C

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

Sun

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

VI

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

Model

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

Description

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

DETAIL FOR

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

Ser#

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

Bumper

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

Owner

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

L

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

SqFt

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

Empty Wt

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

TEC

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

WCC

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

W

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

CuFt

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

ActWt

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

STONS

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

SHC

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

W

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

CCCI

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

TPC

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

H

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

CuLd

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

MaxWt

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

MTONS

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

TCC

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

Vehicle Remarks

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

UMODPC

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

612-301-03

1-Header

2-Vehicle

3-SpecHdng

4-Actual Weight...

MAINTAIN: ... 5 - Ammo/Hazard E-Exit

Maintain Ammunition/Hazardous Data for Vehicles/Containers

DD/MM/YY

Equipment List Data
list sorted by

FICEUFO12

UIC

Exercise
LIN/Index

EchULN D M S A/H *

* C Sun VI Model Description

DETAIL FOR

Ser#

Bumper

Owner

L

SqFt

Empty Wt

TEC

WCC

W

TPC

W

CuFt

ActWt

STONS

SHC

CCCC

Ov

H

CuLd

MaxWt

MTONS

TCC

Vehicle Remarks



Maintain Vehicle



- Select option "2-Vehicle" from Maintenance Ring menu

MAINTAIN: 1-Header 2-Vehicle 3-SpecHdling 4-Actual Weight...

Maintain Vehicle Entries on Equipment List

DD/MM/YY

Equipment List Data

FICEUFO12

list sorted by

UIC

Exercise

* C Sun VI Model Description

LIN/Index

EchULN D M S A/H *

DETAIL FOR

Ser#

Bumper

Owner

L

SqFt

Empty Wt

TEC

WCC

W

TPC

W

CuFt

ActWt

STONS

SHC

CCCC

Ov

H

CuLd

MaxWt

MTONS

TCC

Vehicle Remarks

EQUIPMENT: 1-Maintain 2-Copy 3-Sort 4-Query E-Exit
Maintain Vehicles or Special Handling Equipment

DD/MM/YY

FICEUFO12

Equipment List Data						
list sorted by					Exercise	
UIC					LIN/Index	
* C	Sun	VI	Model	Description	EchULN	D M S A/H *

DETAIL FOR						
Ser#	Bumper		Owner		TPC	
L	SqFt	Empty Wt	TEC	WCC	WI	TPC
W	CuFt	ActWt	STONS	SHC	CCCI	Ov
H	CuLd	MaxWt	MTONS	TCC		
Vehicle Remarks						



Maintain Vehicle Equipment List



- Select "1-Maintain" on the Equipment ring menu
- Press Enter key
- Next Screen opens up

EQUIPMENT: 1-Maintain 2-Copy 3-Sort 4-Query E-Exit
Maintain Vehicles or Special Handling Equipment

DD/MM/YY

FICEUFO12

Equipment List Data						
list sorted by				Exercise		
UIC				LIN/Index	EchULN	D M S A/H *
*	C	Sun	VI	Model	Description	

DETAIL FOR						
Ser#		Bumper			Owner	
L	SqFt	Empty Wt	TEC	WCC	WI	TPC
W	CuFt	ActWt	STONS	SHC	CCCI	Ov
H	CuLd	MaxWt	MTONS	TCC		
Vehicle Remarks						

EQUIPMENT: 1-Maintain 2-Copy 3-Sort 4-Query E-Exit

Press [ESC] to accept [F1] to add [F2] to delete or [F9] for detail section

DD/MM/YY Equipment List Data FICEUFO12

----- FULL list sorted by SHIPMENT NUMBER -----

UIC WAD5A0 Exercise D

* C	Sun	VI	Model	Description	LIN/Index	EchULN	D	M	S	A/H	*			
		D0001	V	M113	CARRIER PERSONNEL FTRAC	D12087 01	00			D	K	Y	N	*
Y		D0002	V	M2	INFANTRY FIGHTING VEHICLE	J87150 02	00			D	K	Y	N	*
Y		D0003	V	M2	INFANTRY FIGHTING VEHICLE	J87150 02	00			D	K	Y	N	*
		D0004	V	M2	INFANTRY FIGHTING VEHICLE	J87150 02	00			D	K	Y	N	*
		D0005	V	M2	INFANTRY FIGHTING VEHICLE	J87150 02	00			D	K	Y	N	*

----- DETAIL FOR D0001 -----

Ser#	Bumper	N.O.H.	Tra/Bmp#	/	Owner
L 192	SqFt 142	Empty Wt 18940	TEC	WCC 876	WI TPC vo
W 106	CuFt 1166	ActWt 18940	STONS 9.5	SHC 9	CCCI A2DB Ov Y
H 99	CuLd 0	MaxWt 21440	MTONS 30	TCC z	

Vehicle Remarks

----- VEHICLE LOAD DATA FOR D0001 -----

Load Description	LIN/Index	SUN	Load#	Qty	COR
------------------	-----------	-----	-------	-----	-----

LIN Index: Press [F6] for Help

UMODPC 612-301-03



Equipment List Data Screen



- This screen is divided into three sections:
 - Section 1: Equipment List Data
 - Section 2: Detail
 - Section 3: Vehicle Load Data

EQUIPMENT: 1-Maintain 2-Copy 3-Sort 4-Query E-Exit

Press [ESC] to accept [F1] to add [F2] to delete or [F9] for detail section

DD/MM/YY Equipment List Data FICEUFO12

FULL list sorted by SHIPMENT NUMBER

UIC WAD5A0 Exercise D

* C	Sun	VI	Model	Description	LIN/Index	EchULN	D	M	S	A/H	*			
		D0001	V	M113	CARRIER PERSONNEL FTRAC	D12087 01	00			D	K	Y	N	*
Y		D0002	V	M2	INFANTRY FIGHTING VEHICLE	J87150 02	00			D	K	Y	N	*
Y		D0003	V	M2	INFANTRY FIGHTING VEHICLE	J87150 02	00			D	K	Y	N	*
		D0004	V	M2	INFANTRY FIGHTING VEHICLE	J87150 02	00			D	K	Y	N	*
		D0005	V	M2	INFANTRY FIGHTING VEHICLE	J87150 02	00			D	K	Y	N	*

DETAIL FOR D0001

Ser#	Bumper	N.O.H.	Tra/Bmp#	/	Owner
L 192	SqFt 142	Empry Wt 18940	TEC	CCC 876	WI TPC vo
W 106	CuFt 1166	Actvlt 40	SLC 9	CCCCI A2DB	Ov Y
H 99	CuLd 0	MaxVwt 21440	WTONS 30	CCC Z	

Vehicle Remarks

VEHICLE LOAD DATA FOR D0001

Load Description	LIN/Index	SUN	Load#	Qty	COR
LIN Index: Press [F6] for Help					

UMODPC 612-301-03



Add a Vehicle



- Select option [F1] to add
 - Blank line appears with Lin/Index highlighted by the cursor

EQUIPMENT: 1-Maintain 2-Copy 3-Sort 4-Query E-Exit

Press [ESC] to accept [F1] to add [F2] to delete or [F9] for detail section

DD/MM/YY

Equipment List Data

FICEUFO12

FULL list sorted by SHIPMENT NUMBER

UIC WAD5A0

Exercise D

* C	Sun	VI	Model	Description	LIN/Index	EchULN	D	M	S	A/H	*
Y	D0002	V	M213	DRAWNRYPERSONNELVEHICLE	D00007 02	00					
Y	D0003	V	M2	INFANTRY FIGHTING VEHICLE	J87150 02	00					
y	D0004	V	M2	INFANTRY FIGHTING VEHICLE	J87150 02	00					
	D0006	V	M2	INFANTRY FIGHTING VEHICLE	J87150 02	00					

DETAIL FOR D0001

Ser#	Bumper	Tra/Bmp#	/	Owner
L 192 SqFt 142 Empty Wt 18940 TEC WCC 876 WI TPC vo				
W 106 CuFt 1166 ActWt 18940 STONS 9.5 SHC 9 CCCI A2DB Ov Y				
H 99 CuLd 0 MaxWt 21440 MTONS 30 TCC z				

Vehicle Remarks

VEHICLE LOAD DATA FOR D0001

Load Description	LINIndex	SUN	Load#	Qty	COR
------------------	----------	-----	-------	-----	-----

Line Item Number (LIN): Press [F6] for Help

UMODPC

612-301-03



Add a Vehicle (Cont)



- Enter LIN number (X40009 02)
 - Press Enter key
- TC-ACCIS adds vehicle and information pertaining to that vehicle
 - You will be prompted to complete the Echelon, MPOE and A/H columns

Note: A vehicle cannot be added to the AUEL without a LIN/Index, but other equipment can

EQUIPMENT: 1-Maintain 2-Copy 3-Sort 4-Query E-Exit

Press [ESC] to accept [F1] to add [F2] to delete or [F9] for detail section

DD/MM/YY Equipment List Data FICEUFO12

FULL list sorted by SHIPMENT NUMBER

UIC WAD5A0 Exercise D

* C	Sun	VI	Model	Description	LIN/Index	Ech	ULN	D	M	S	A/H	*			
			D0030 V	M35A2	TRK CARGO 2-1/2-TON	X40009	02	00			D	K	Y	N	*
			D0001 V	M113	CARRIER PERSONNEL FTRAC	D12087	01	00			D	K	Y	N	*
Y			D0002 V	M2	INFANTRY FIGHTING VEHICLE	J87150	02	00			D	K	Y	N	*
Y			D0003 V	M2	INFANTRY FIGHTING VEHICLE	J87150	02	00			D	K	Y	N	*
			D0004 V	M2	INFANTRY FIGHTING VEHICLE	J87150	02	00			D	K	Y	N	*
			D0005 V	M2	INFANTRY FIGHTING VEHICLE	J87150	02	00			D	K	Y	N	*

DETAIL FOR D0030

Ser#	Bumper	Tra/Bmp#	/	Owner
L 265 SqFt 177	Empty Wt 13180	TEC	WCC 867	WI TPC VO
W 96 CuFt 1193	ActWt 13180	STONS 6.6	SHC 9	CCCI R2DB Ov N
H 81 CuLd 0	MaxWt 18180	MTONS 30	TCC Z	

Vehicle Remarks

VEHICLE LOAD DATA FOR D0030

Load Description	LIN/Index	SUN	Load#	Qty	COR
Line Item Number (LIN): Press [F6] for Help					

UMODPC 612-301-03



Delete a Vehicle



- Select option [F2] to delete
 - Delete Equipment window screen appears

EQUIPMENT: 1-Maintain 2-Copy 3-Sort 4-Query E-Exit

Pres

[ESC] Accept [CTRL-C] Abort [CTRL-J] Row dn [CTRL-K] Row Up
[F3] Page dn [F4] Page Up [F10] Select All [SPACEBAR] Deselect

DD/MM/YY

Delete Equipment

FICEUF198

X	Sun	Model	Description	LIN/Index	EchULN
<input checked="" type="checkbox"/>	D0001	M113	Carrier Personnel FTRAC	D12087 07	00
<input type="checkbox"/>	D0002	M2	Infantry Fighting Vehicle	J87150 02	00
<input type="checkbox"/>	D0003	M2	Infantry Fighting Vehicle	J87150 02	00
<input type="checkbox"/>	D0004	M2	Infantry Fighting Vehicle	J87150 02	00
<input type="checkbox"/>	D0005	M2	Infantry Fighting Vehicle	J87150 02	00
<input type="checkbox"/>	D0006	M2	Infantry Fighting Vehicle	J87150 02	00
<input type="checkbox"/>	D0007	M2	Infantry Fighting Vehicle	J87150 02	00
<input type="checkbox"/>	D0008	M2	Infantry Fighting Vehicle	J87150 02	00
<input type="checkbox"/>	D0009	M2	Infantry Fighting Vehicle	J87150 02	00

Press X to Select equipment to DELETE



Modifying Data in TC-ACCIS



Modify Vehicle Detail



- Highlight vehicle to be modified in Section 1 (D0001) and Press the [F9] key
 - Cursor moves to Section 2
 - Only system-highlighted areas may be modified
 - Message line at bottom of screen provides guidance for field entries
- Press Escape [Esc] to finish

EQUIPMENT: 1-Maintain 2-Copy 3-Sort 4-Query E-Exit

Press [ESC] to accept [F1] to add [F2] to delete or [F9] for detail section

DD/MM/YY Equipment List Data FICEUFO12

FULL list sorted by SHIPMENT NUMBER

UIC WAD5A0 Exercise D

* C	Sun	VI	Model	Description	LIN/Index	EchULN	D	M	S	A/H	*
Y	D0001	V	M113	CARRIER PERSONNEL FTRAC	D12087 01	00 00	D	K	Y	N	*
Y	D0002	V	M2	INFANTRY FIGHTING VEHICLE	J87150 02	00	D	K	Y	N	*
Y	D0003	V	M2	INFANTRY FIGHTING VEHICLE	J87150 02	00	D	K	Y	N	*
	D0004	V	M2	INFANTRY FIGHTING VEHICLE	J87150 02	00	D	K	Y	N	*
	D0005	V	M2	INFANTRY FIGHTING VEHICLE	J87150 02	00	D	K	Y	N	*

DETAIL FOR D0001

Ser# 11 Bumper N.O.H. Tra/Bmp# / Owner

L 192 SqFt 142 Empty Wt 18940 TEC WCC 876 WI TPC vo

W 106 CuFt 1166 ActWt 18940 STONS 9.5 SHC 9 CCCI A2DB Ov Y

H 99 CuLd 0 MaxWt 21440 MTONS 30 TCC Z

Vehicle Remarks

VEHICLE LOAD DATA FOR D0001

Load Description	LIN/Index	SUN	Load#	Qty	COR
------------------	-----------	-----	-------	-----	-----

Enter Serial Number, USA Number or Lot Number

UMODPC 612-301-03



Add a Load



- ① Highlight vehicle to add load to in Section 1 (D0023) and Press the [F9] key twice
 - Cursor moves to Section 3
- ② Select [F1] Add New Load
 - Vehicle load data screen appears, overlaying equipment list screen

E	F1-Add New Load F3-Next Load F4-Previous Load Press [F7]-Reassign Load						
P	F10-Copy Load to another Vehicle [ESC] to accept [CTRL-C] to abort						
D	DD/MM/YY	Vehicle Load Data				FICEUFO97	2
U	LIN		LINIndex		Model		
*	SUN		Load Number		Standard Indicator		COR
	Length				Width		
	Height				Weight		
	Quantity				CuFt		
	Total Weight		0		TotCuFt	0	
S	Description						
L	Type Equipment Code				Type Pack Code		
W	Water Commodity Code				Special Handling Code		
H	Type Cargo Code				Ammo/Hazard		
V	Record 1 of 1						R
L	LIN ITEM NO. (LIN): Press [F6] for Help						



Add a Load (Cont)



- ③ Type LIN number in LIN G40175 and press Enter
- ④ Type Index number 04 and press Enter
 - The cursor will move to the Standard Indicator field

F1-Add New Load F3-Next Load F4-Previous Load Press [F7]-Reassign Load

F10-Copy Load to another Vehicle [ESC] to accept [CTRL-C] to abort

DD/MM/YY

Vehicle Load Data

FICEUFO97

LIN	G40175	LINIndex	04	Model	
SUN	E0023	Load Number	A	Standard Indicator	
Length		Width		COR	
Height		Weight			
Quantity		CuFt			
Total Weight		TotCuFt	0		0
Description	GENERATOR				
Type Equipment Code		Type Pack Code			
Water Commodity Code		Special Handling Code		9	
Type Cargo Code		Ammo/Hazard		N	

Record 1 of 1

LIN ITEM NO. (LIN): Press [F6] for Help

UMODPC

612-301-03



Add a Load (Cont)



- ⑤ To add a standard load, enter “Y” and the remaining data fields will be filled in
 - Enter load quantity when prompted

F1-Add New Load F3-Next Load F4-Previous Load Press [F7]-Reassign Load

F10-Copy Load to another Vehicle [ESC] to accept [CTRL-C] to abort

DD/MM/YY

Vehicle Load Data

FICEUFO97

LIN	G40175	LINIndex	04	Model	GENERATOR
SUN	E0023	Load Number	A	Standard Indicator	Y
Length	62	Width	53		
Height	27	Weight	548		
Quantity	1	CuFt	1		
Total Weight	548	TotCuFt	1		
Description	GENERATOR				
Type Equipment Code	U	Type Pack Code	PC		
Water Commodity Code	700	Special Handling Code	9		
Type Cargo Code	Z	Ammo/Hazard	N		

Record 1 of 1

LIN ITEM NO. (LIN): Press [F6] for Help



Add a Load (Cont)



- ⑥ To add a non-standard load, enter "N" and continue to fill in the remaining highlighted fields

F1-Add New Load F3-Next Load F4-Previous Load Press [F7]-Reassign Load

F10-Copy Load to another Vehicle [ESC] to accept [CTRL-C] to abort

DD/MM/YY

Vehicle Load Data

FICEUFO97

LIN	G40175	LINIndex	04	Model	
SUN	E0023	Load Number	A	Standard Indicator	N
Length		Width		COR	
Height		Weight			
Quantity		CuFt			
Total Weight		TotCuFt	0		0

Description GENERATOR

Type Equipment Code		Type Pack Code	
Water Commodity Code		Special Handling Code	
Type Cargo Code		Ammo/Hazard	

Record 1 of 1

LIN ITEM NO. (LIN): Press [F6] for Help

UMODPC

612-301-03



Add a Load (Cont)



- ⑦ When finished adding the load press Escape [Esc] and the load information will appear at the bottom of Equipment List screen



Nonstandard Loads



A nonstandard load may or may not have a LIN number

- If load has been modified and no longer meets original specifications, i.e., (length x width x height or weight), enter the letter "N" in the Standard Indicator field and continue to fill in the remaining highlighted fields

F1-Add New Load F3-Next Load F4-Previous Load Press [F7]-Reassign Load

F10-Copy Load to another Vehicle [ESC] to accept [CTRL-C] to abort

DD/MM/YY

Vehicle Load Data

FICEUFO97

LIN	G40175	LINIndex	04	Model	GENERATOR
SUN	Load Number	Standard Indicator	N	COR	
Length		Width			
Height		Weight			
Quantity		CuFt			
Total Weight		TotCuFt	0		0
Description	GENERATOR				
Type Equipment Code		Type Pack Code			
Water Commodity Code		Special Handling Code			
Type Cargo Code		Ammo/Hazard			
Record 1 of 1					
LIN ITEM NO. (LIN): Press [F6] for Help					



Equipment Characteristics Query



- ❗ If you wish to query the database for the LIN number, from the Vehicle Load Data window, move the cursor to the LIN Field & press [F6]
- The Equipment Characteristics Query window will appear, overlaying the Vehicle Load Data window

F1-Add New Load F2-Next Load F4-Previous Load Press [F7]-Reassign Load
F10-Copy Load Vehicle [ESC] to accept [CTRL-C] to abort

Press F6

DD/MM/YY Equipment Characteristics Query FICEUF037

Enter either LIN, Model, or Description. Enter Index if known or leave it blank.

LIN	Index	Model	Description
<input type="text"/>		<input type="text"/>	<input type="text"/>

Press [ESC] to accept or [CTRL-C] to abort

Enter valid LIN or use * or ? for pattern matching

Record 1 of 1
LIN ITEM NO. (LIN): Press [F6] for Help



Equipment Characteristics Query (Cont)



- ② Enter the LIN number, the Model or the Description in the proper field and the system will query its data base for the item information

TC-ACCIS will then display the equipment by LIN number showing the Model & Description



Equipment Characteristics Table



- If you don't know the LIN, model or description, then:
 - ❶ From the Equipment Characteristics Query window, enter an "*" or a "?" in the LIN/Index field. TC-ACCIS will display the entire Equipment Characteristics Table

Equipment Characteristics Table

F6 for more information on this LIN/Index (Length, Width, Height, etc.)

DD/MM/YY	Equipment Characteristics Table			FICEUF038
LIN/Index	Model	Description	Configuration	
J49055 07	JHGV7.5A	GEN SET 7.5 KW WHLMTD	OPERATIONAL	
J49055 08	JHGV7.5A	GEN SET 7.5 KW WHLMTD	RED-AR-220-10	
J49055 09	JHGV7.5A	GEN SET 7.5 KW WHLMTD	CRATED	
J49055 10	5982-1B	GEN SET 7.5 KW WHLMTD	OPERATIONAL	
J49055 11	5982-1B	GEN SET 7.5 KW WHLMTD	RED-AR-220-10	
J49055 12	5982-1B	GEN SET 7.5 KW WHLMTD	BOXED	
J49055 04	POLMC111	GEN SET 7.5 KW WHLMTD	OPERATIONAL	
J49055 05	POLMC111	GEN SET 7.5 KW WHLMTD	RED-AR-220-10	

[CTRL-J] row down [CTRL-K] row up [F3] page down
Position cursor on a line and Press [ESC] Accept [CTRL-C] Abort



Equipment Characteristics Table (Cont)



- ② Select equipment from the Equipment Characteristics Table by scrolling to the item.
- ③ Then press [ESC] to accept & the system will return to the Vehicle Load Data screen
- ④ Enter the letter "Y" or "N" in the Standard Indicator field

F1-Add New Load F3-Next Load F4-Previous Load Press [F7]-Reassign Load			
F10-Copy Load to another Vehicle [ESC] to accept [CTRL-C] to abort			
DD/MM/YY		Vehicle Load Data	
FICEUFO97			
LIN	J49055	LINIndex	04
Model	POLMC111		
SUN	D0022	Load Number	
Standard Indicator	Y-N COR		
Length		Width	
Height		Weight	
Quantity		CuFt	0
Total Weight	0	TotCuFt	
Description			
Type Equipment Code		Type Pack Code	
Water Commodity Code		Special Handling Code	
Type Cargo Code		Ammo/Hazard	
Record 1 of 1			
Enter LIN or Press F6 for Help			
UMODPC		612-301-03	



Equipment Characteristics Table (Cont)



- ④ If you enter the letter "Y" in the Standard Indicator field and press the Enter key the remaining fields will fill in with data

F1-Add New Load F3-Next Load F4-Previous Load Press [F7]-Reassign Load			
F10-Copy Load to another Vehicle [ESC] to accept [CTRL-C] to abort			
DD/MM/YY		Vehicle Load Data	
FICEUFO97			
LIN	J49055	LINIndex	04
Model	POLMC111		
SUN	D0022	Load Number	
Standard Indicator	Y	COR	
Length	78	Width	40
Height	39	Weight	825
Quantity	1	CuFt	71
Total Weight	825	TotCuFt	71
Description	GEN SET 7.5 KW WHLMTD		
Type Equipment Code	6	Type Pack Code	PC
Water Commodity Code	700	Special Handling Code	9
Type Cargo Code	Z	Ammo/Hazard	N
Record 1 of 1			
Enter LIN or Press F6 for Help			
UMODPC		612-301-03	



Equipment Characteristics Table (Cont)



- ⑤ If you enter the letter "N" in the Standard Indicator field and press the Enter Key you will be prompted to enter the remaining data
- ⑥ After entering the data, press [Esc] to accept your entries

F1-Add New Load F3-Next Load F4-Previous Load Press [F7]-Reassign Load			
F10-Copy Load to another Vehicle [ESC] to accept [CTRL-C] to abort			
DD/MM/YY		Vehicle Load Data	
FICEUFO97			
LIN	J49055	LINIndex	04
SUN	D0022	Model	POLMC111
Load Number		Standard Indicator	N
COR			
Length		Width	
Height		Weight	
Quantity		CuFt	0
Total Weight	0	TotCuFt	
Description			
Type Equipment Code		Type Pack Code	
Water Commodity Code		Special Handling Code	
Type Cargo Code		Ammo/Hazard	
Record 1 of 1			
Enter LIN or Press F6 for Help			
UMODPC		612-301-03	



Equipment Characteristics Table (Cont)



- After completing this selection, press [Esc].
- This brings you back to Section Three of the "Vehicle Load Data" screen. Press [F9] to return to the "Equipment List Data" then press [Esc]
- At the bottom of the screen the following question will appear

Have you completed processing equipment (y/n)?

EQUIPMENT: 1-Maintain 2-Copy 3-Sort 4-Query E-Exit

Press [ESC] to accept [F1] to add [F2] to delete or [F9] for detail section

DD/MM/YY

Equipment List Data

FICEUFO12

UIC

WAD5A0

Exercise

* C Sun VI Model Description LIN/Index EchULN D M S A/H *

D0022

V

M35A2

TRK CARGO 2-1/2-TON

X40009

02

00

D

K

Y

N

*

D0023

V

M35A2

TRK CARGO 2-1/2-TON

X4009

02

00

D

K

Y

N

*

D0024

V

M35A2

TRK CARGO 2-1/2-TON

J87150

02

00

D

K

Y

N

*

D0025

V

M35A2

TRK CARGO 2-1/2-TON

J87150

02

00

D

K

Y

N

*

D0026

V

M105A2

TRAILER CARGO 1-1/2

J87150

02

00

D

K

Y

N

*

DETAIL FOR D0022

Ser# 3333

Bumper TNG 23

Tra/Bmp# /

Owner

L 265 SqFt 177 Empty Wt 13180

TEC

WCC 867

WI

TPC vo

W 96 CuFt 1193 ActWt 13745

STONS 6.9 SHC 4

CCCI

R2DB

OV N

H 81 CuLd 19 MaxWt 18180

MTONS 30

TCC 1

Vehicle Remarks

VEHICLE LOAD DATA FOR D0022

Load Description

LINIndex

SUN

Load#

Qty

COR

GEN SET 7.5 KW WHLMTD

J49055 04

E0022

A

1

Have you completed processing equipment (y/n)?



Ammo/Hazardous Load



- The procedures for adding hazardous material loads are the same as for adding non-hazardous loads, with one exception.
 - The exception is the hazardous material record required upon completion of adding the load

EQUIPMENT: 1-Maintain 2-Copy 3-Sort 4-Query E-Exit

Press [ESC] to accept [F1] to add [F2] to delete or [F9] for detail section

DD/MM/YY Equipment List Data FICEUFO12

FULL list sorted by SHIPMENT NUMBER

UIC WAD5A0

Exercise D

* C	Sun	VI	Model	Description	LIN/Index	Ech	ULN	D	M	S	A/H	*
			D0022 V	M35A2	TRK CARGO 2-1/2-TON	X40009	02	00			D K Y N	*
			D0023 V	M35A2	TRK CARGO 2-1/2-TON	X40009	02	00			D K Y N	*
			D0024 V	M35A2	TRK CARGO 2-1/2-TON	J87150	02	00			D K Y N	*
			D0025 V	M35A2	TRK CARGO 2-1/2-TON	J87150	02	00			D K Y N	*
			D0026 V	M105A2	TRAILER CARGO 1-1/2	J87150	02	00			D K Y N	*

DETAIL FOR D0023

Ser#	3333	Bumper	TNG	23	Tra/Bmp#	/	Owner					
L	265	SqFt	177	Empty Wt	13180	TEC	WCC	867	WI	TPC	VO	
W	96	CuFt	1193	ActWt	13180	STONS	6.6	SHC	9	CCCI	R2DB	OV N
H	81	CuLd	1	MaxWt	18180	MTONS	30	TCC	Z			

Vehicle Remarks

VEHICLE LOAD DATA FOR D0023

Load Description	LIN/Index	SUN	Load#	Qty	COR
------------------	-----------	-----	-------	-----	-----

F1-Add New Load F3-Next Load F4-Previous Load Press [F7]-Reassign Load

F10-Copy Load to another Vehicle [ESC] to accept [CTRL-C] to abort

DD/MM/YY

Vehicle Load Data

FICEUFO97

LIN	YA0074	LINIndex	01	Model	500 LBS	
SUN	E0022	Load Number	A	Standard Indicator	Y	COR
Length		40.0		Width		48.0
Height		17.0		Weight		565
Quantity		1		CuFt		19
Total Weight		565		TotCuFt		19
Description	AMMO .60 CAL & BELOW					
Type Equipment Code		R		Type Pack Code		PC
Water Commodity Code		680		Special Handling Code		4
Type Cargo Code		I		Ammo/Hazard		Y

Record 1 of 1

LIN ITEM NO. (LIN): Press [F6] for Help

UMODPC

612-301-03



Ammo/Hazardous Load (Cont)



- After loading the hazardous material, press [Esc] to accept the load. The load appears in Section Three of the screen.
- Next press [F9] and the cursor moves to Section One
 - The truck is highlighted and a "Y" is displayed in the "A/H" field indicating there is ammunition or hazardous materials in the load

EQUIPMENT: 1-Maintain 2-Copy 3-Sort 4-Query E-Exit

Press [Esc] to accept [F1] to add [F2] to delete or [F9] for detail section

DD/MM/YY Equipment List Data FICEUFO12
FULL list sorted by SHIPMENT NUMBER

UIC WAD5A0

Exercise D

* C	Sun	VI	Model	Description	LIN/Index	EchULN	D	M	S	A/H	*
			D0022 V	M35A2	TRK CARGO 2-1/2-TON	X40009 02	00			D K Y N	*
			D0023 V	M35A2	TRK CARGO 2-1/2-TON	X40009 02	00			D K Y Y	*
			D0024 V	M35A2	TRK CARGO 2-1/2-TON	J87150 02	00			D K Y N	*
			D0025 V	M35A2	TRK CARGO 2-1/2-TON	J87150 02	00			D K Y N	*
			D0026 V	M105A2	TRAILER CARGO 1-1/2	J87150 02	00			D K Y N	*

DETAIL FOR D0023

Ser#	3333	Bumper	TNG	23	Tra/Bmp#	/	Owner
L	265	SqFt	177	Empty Wt	13180	TEC	WCC 867 WI
W	96	CuFt	1193	ActWt	13180	STONS 6.6	SHC 9 CCCI
H	81	CuLd	1	MaxWt	18180	MTONS 30	TCC Z

Vehicle Remarks

VEHICLE LOAD DATA FOR D0023

Load Description	LIN/Index	SUN	Load#	Qty	COR
AMMO .60CAL & BELOW	Y100074 01	D0023	A	1	

UMODPC

612-301-03



Ammo/Hazardous Load (cont)



- Return to the Equipment Ring Menu by pressing [Esc]
- A message will appear stating:

"Have you completed processing equipment (y/n)?"

EQUIPMENT: 1-Maintain 2-Copy 3-Sort 4-Query E-Exit

Press [ESC] to accept [F1] to add [F2] to delete or [F9] for detail section

DD/MM/YY

Equipment List Data

FICEUFO12

list sorted by

UIC WAD5A0

Exercise

* C Sun VI Model Description LIN/Index EchULN D M S A/H *

			D0022	V	M35A2	TRK CARGO 2-1/2-TON	X40009	02	00		D	K	Y	N	*
			D0023	V	M35A2	TRK CARGO 2-1/2-TON	X4009	02	00		D	K	Y	N	*
			D0024	V	M35A2	TRK CARGO 2-1/2-TON	J87150	02	00		D	K	Y	N	*
			D0025	V	M35A2	TRK CARGO 2-1/2-TON	J87150	02	00		D	K	Y	N	*
			D0026	V	M105A2	TRAILER CARGO 1-1/2	J87150	02	00		D	K	Y	N	*

DETAIL FOR D0022

Ser#	3333			Bumper	TNG	23		Tra/Bmp#	/		Owner				
L	265	SqFt	177	Empty Wt	13180			TEC	WCC	867	WI		TPC	VO	
W	96	CuFt	1193	ActWt	13745			STONS	6.9	SHC	4	CCCI	R2DB	OV	N
H	81	CuLd	19	MaxWt	18180			MTONS	30	TCC	1				

Vehicle Remarks

VEHICLE LOAD DATA FOR D0022

Load Description	LINIndex	SUN	Load#	Qty	COR
AMMO .60CAL & BELOW	YA0074 01	D0022	A	1	

Have you completed processing equipment (y/n)?



Ammo/Hazardous Load (Cont)



- After pressing "y" you are taken back to the main Equipment Ring Menu
- Press [E] to exit or highlight "E-Exit" and press enter to exit.
- A message will appear at the bottom of screen stating:

"Do you want to update hazardous materials records? (y/n)"

EQUIPMENT: 1-Maintain 2-Copy 3-Sort 4-Query E-Exit

Exit to previous menu

DD/MM/YY

Equipment List Data
list sorted by

FICEUFO12

UIC

Exercise

* C Sun VI Model Description

LIN/Index

EchULN D M S A/H *

DETAIL FOR

Ser#

Bumper

Owner

L

SqFt

Empty Wt

TEC

WCC

WI

TPC

W

CuFt

ActWt

STONS

SHC

CCCI

Ov

H

CuLd

MaxWt

MTONS

TCC

Vehicle Remarks

Do you want to update the Hazardous materials records (y/n)?

UMODPC

612-301-03



Ammo/Hazardous Load (Cont)



- By entering "y" you will be prompted by additional screens to process each of the ammo/ hazardous material loads you have entered.
- When this process is completed you will then go back to the Maintain Ring Menu



Maintaining Special Handling Equipment (F Records) & Creating DEL



Maintaining Special Handling Equipment (F Records)



- Special Handling Equipment is a unit's TO&E equipment other than vehicles or secondary loads (F records). This equipment must be identified by Echelon/ULN for movement to POE.

MAINTAIN: 1-Header 2-Vehicle 3- SpecHdling 4-Actual Weight...

Maintain Vehicle Entries on Equipment List

DD/MM/YY

Equipment List Data
list sorted by

FICEUFO12

UIC

Exercise

* C Sun VI Model Description

LIN/Index

EchULN D M S A/H *

DETAIL FOR

Ser#

Bumper

Owner

L

SqFt

Empty Wt

TEC

WCC

W

TPC

W

CuFt

ActWt

STONS

SHC

CCCC

Ov

H

CuLd

MaxWt

MTONS

TCC

Vehicle Remarks



Maintaining Special Handling Equipment (F Records) (Cont)



- Select option “3-Spec Hdling” (special handling) from the Maintain ring menu



Maintaining Special Handling Equipment (F Records) (Cont)



- Select option "1-Maintain" from the Equipment Ring Menu
 - Special Handling screens are maintained the same as Vehicle data screens

EQUIPMENT: 1-Maintain 2-Copy 3-Sort 4-Query E-Exit

Press [ESC] to accept [F1] to add [F2] to delete or [F9] for detail section

DD/MM/YY Equipment List Data FICEUFO12
-----FULL list sorted by SHIPMENT NUMBER-----

UIC	WAD5A0	Exercise	D						
* C Sun	Model	Description	LIN/Index	Ech	ULN	D	M	S	A/H *
F0003	NONE	463-L AF LONG PALLET	YA0081 01	00		R	F	Y	N *
F0004	NONE	463-L AF LONG PALLET	YA0081 01	00		R	F	Y	N *
F0005	NONE	463-L AF LONG PALLET	YA0081 01	00		R	F	Y	N *

-----DETAIL FOR F0003-----

Ser#	D-WAD5A0-F0003	Bumper	N.O.H.	/	Owner
L	108	SqFt	66	Empty Wt 350	TEC WCC 700 WI TPC PC
W	88	CuFt	22	ActWt 8375	STONS 4.1 SHC 9 CCCI J3BA Ov N
H	4	CuLd	17	MaxWt 10100	MTONS 1 TCC Z

Vehicle Remarks

-----VEHICLE LOAD DATA FOR F0003-----

Load Description	LIN/Index	SUN	Load#	Qty	COR
YELLOW TAT BAGGAGE		G0003	A	1	

LIN/Index: Press [F6] for Help

UMODPC

612-301-03



Maintaining Special Handling Equipment (F Records) (Cont)



- **Note:** Adding Special Handling Equipment follow the same procedures as entering Vehicle Data



Data: COMMPY				(EXCERPTS FROM)																				
TIME: 06:00				AUEL REPORT - UNITEQUIPMENT LIST																				
UIC: WWWWWWW				TYPE DATA: MD				UNIT NAME: KTH TRANS CO				STATION: FTEUSTIS				STATE: VA								
SHIPMENT E		UNIT		SHIPMENT				DIMENSIONS				PLANNED				ACTUAL				M				
NUMBER		H LIN		IND DESCRIPTION				MODEL B.B.				LGTH WIDHT HGHT CUFT				ITEM WT LBS				LOADED TP OMMH M P CGO				
D0017		Y40094		#1	TRUCK CARGO 02 IGT				M35A2 A1T				245 104 113 1137 18189				13180				16180 VO 34729 U RIDE			
D0018		Y40094		#1	TRUCK CARGO 02 IGT				M35A2 A1T				245 104 113 1137 18189				13180				16180 VO 34729 U RIDE			
D0026		T94273		#1	TRK CARGO 10T 3X1E				M977 A26				401 140 112 3639 50280				47160				51000 VO 38214 U RIDE			
A					AMMO & LOCAL BELOW				PCS-												PC 4804			
D0033		T91656		#1	TRUCK TRACTOR N36				M195 A33				299 123 141 3065 27320				27320				27320 VO 38129 U RIDE			
D0034		T41103		#1	TRUCK TRACTOR G34				M195 A34				249 123 134 2095 10421				10421				10421 VO 38129 U RIDE			
D0042		352290		#1	TRK LIFT FRK RT 2T				4000LB A43				280 90 98 187 9150				9150				9150 VO 39274 U A20A			
D0044		352290		#1	TRK LIFT FRK RT 2T				4000LB A43				280 90 98 187 9150				9150				9150 VO 39274 U A20A			
D0045		352290		#1	TRK LIFT FRK RT 2T				4000LB A43				280 90 98 187 9150				9150				9150 VO 39274 U A20A			
D0046		V95811		#1	TRAILER CARGO 19ZT				M15A2 A1TT				166 33 90 782 5670				2670				2470 VE 39229 U R2D			
D0057		S70159		#7	SLIP FLATBED 3JT				H12ZA1 A34T				490 96 140 4029 36490				27470				27470 VE 39329 U R2D			
					PKS-LIFT FRK RT 2T																			
F0001		Y40094		#9	AMMO & LOCAL BELOW				4500 LBS				100 33 93 512 4830				4830				4830 PC 4804 U M2DA			
F0002		Y40094		#9	AMMO & LOCAL BELOW				4500 LBS				100 33 73 402 2830				2830				3130 PC 4804 U M2DA			

- Two digit code in "TYPE DATA:" block indicates that this is a DEL report



Create the Deployment Equipment List (DEL)



- When a unit deploys, the UMO must create a Deployment Equipment List (DEL) by copying the equipment from the AUEL into the DEL
- The UMO will receive a 2-character TDC from the UMC for the deployment/exercise based on FORSCOM direction
- The AUEL must already be updated and accurate

Press [F2] to cancel insert

DD/MM/YY

Unit Header Detail

FICEUF007

Exercise X4 - FT STOCKTON DEFAULT

UIC

WWWWW - Default Corps

Description

Default Exercise-Peacetime TDC for reporting Unit Movement
Data to the FORSCOM COMPASS System

Ech/ULN

Description

Str

SC

Avail Date

Dpt Date

Rqd Date

DMOD

Remarks

Enter/Update Echelon (Press [F6] for help)



Create the DEL (Cont)



- A header must be created to process a Deployment Equipment List. The Unit Header contains the following:
 - Echelon identifier
 - Echelon description field
 - "Str" field is number of personnel deploying
 - SC field, number of Super Cargoes/Security
 - Available Date is date of the movement
 - RDD is date unit will actually be on site

Create Equipment List: 1-Full Copy 2-Partial Copy 3-ManualEntry E-Exit

Create equipment list by copying from another TDC

Equipment List Data

FICEUFO02

Type Data Code

The Type Data Code you chose to maintain currently has no data. If you wish to create an Equipment List for this Type Data Code you may do so by:

(1-Full Copy) - copying all the equipment from another TDC

(2-Partial Copy)-manually selecting equipment from another TDC or

(3-Manual Entry)-by manually entering equipment